KORG



MONOPHONIC SYNTHESIZER MS-10


CONTENTS


1.	SPECIFICATIONS	į
2.	STRUCTURAL DIAGRAM	-
3.	CIRCUIT DIAGRAM	
4.	PRINTED CIRCUIT BOARD KLM-126B	1
5.	PARTS LIST (Mechanical parts not listed)	-
6.	BLOCK DIAGRAM	1
7.	ADJUSTMENT PROCEDURE	1

1. SPECIFICATIONS


<(CONTROL SECTION	N>	<patch panel="" section=""></patch>						
	Keyboard Voltage controlled oscillator	 F~C 32 Keys/(2-2/3 octaves) Scales [32', 16', 8', 4',]/ + 6 octaves (FM)) 	Keyboard	 Keyboard control voltage output (exponential)/0V ~ + 8V Keyboard trigger output/ CAN 					
		Wave form M., PW/PWM, Noise)/(4 modes) PW adjust/PWM intensity Pitch [1 OCTAVE OR MORE] portamento Frequency modulation intensity	2. VCO	VCO control voltage input (linear response)/0V ~ +8V External frequency control input (OCT/V)/ -3V ~ +3V External pulse width modulation input/ -5V ~ +5V					
		by MG Frequency modulation intensity by EG/EXT	3. VCF	External signal input/3VPP max External cut-off frequency con- trol input (20CT/V)/-5V~+5V					
3.	Voltage controlled low pass filter	Cut-off frequency Peak [flat ~ self OSC]	4. VCA	 Initial gain control in- put/0V~+5V 					
		Cut-off frequency modulation intensity by MG Cut-off frequency modulation	5. EG	 External trigger input/ \(\frac{1}{2} \)_GNO Envelope signal reverse output/ \(-5V \simes +5V \) 					
4.	Envelope generato	intensity by EG/EXT r • Hold time	6. MG	Triangle output (\\-\^-\/)/ 5VPP					
		Attack time Decay time		Rectangle output (☐-☐-☐) /0-→+5V					
		Sustain level Release time	7. Noise generator	Pink noise output/5VPP White noise output/5VPP					
5.	Modulation generator	Wave form	8. Manual controller	Control wheel output/ −5V ~0V ~ +5V					
	External input	Frequency Signal level adjust	Signal out	 Signal output/2VPP max 					
	Manual controller	Control wheel CENTER CLICK STOP	10. Power consumption	(output impedance 3.5kΩ) on• 5 Watts					
8.	Power, SW Ä volume	Volume	Dimension Weight	• 499(W) x 309(D) x 249(H) mm • 6.3 kgs					
			Accessories	Patch cord/35 cm x 1					


2. STRUCTURAL DIAGRAM

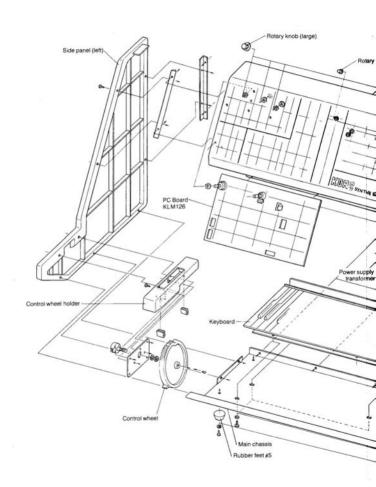

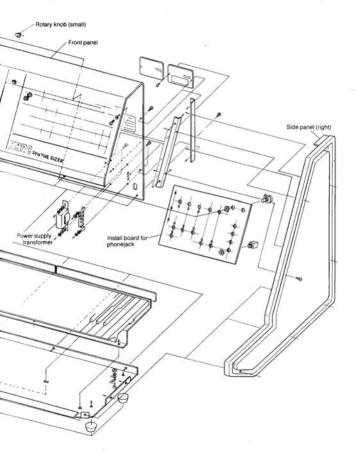


3. CIRCUIT DIAGRAM

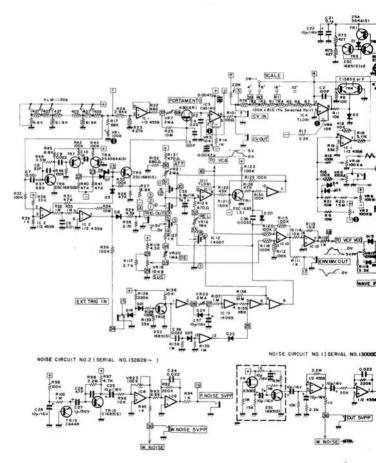

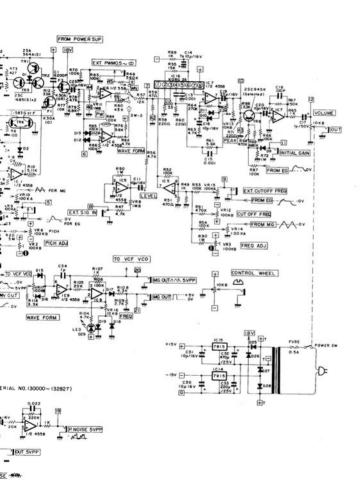


4. PRINTED CIRCUIT BOARD KLM-126B

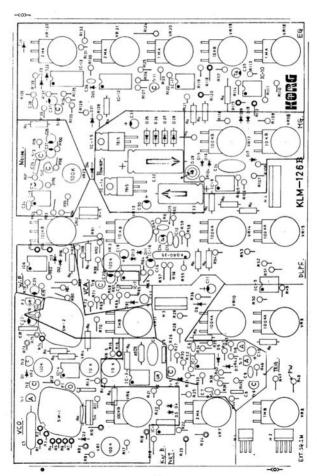

5. PARTS LIST (Mechanical parts not listed)

● CARBON RESISTORS		●POLYPROPYLENE		●ROTARY VARIABLE RESISTORS				
not listed		CAPACITORS		RS	EVH-5LA802B15 x 3			
		1	200V-0.22 _µ F	x	1		×	3
●METAL FILM RESI						EVH-5LA802A15	×	4
1/4W-100Ω		1	 POLYSTYRENE CAPAC 		RS	EVH-5LA802A16	×	2
1/4W-403Ω		16	50V-6200pF	x	1	EVH-5LA802B16	×	2
1/4W-427Ω		16				EVH-5LA802A26	×	3
1/4W-2.94kΩ		1	POLYESTER CAPACE			EVC-BQ5P18B14	×	1
1/4W-4.27kΩ		1	100V-1μF	x	1	RJAP20B14	×	1
1/4W-5.11kΩ		1			500			
1/4W-61.9kΩ			●TRANSI	700		● ROTARY S		-
1/4W-100kΩ		15	2SA-564A(S)		3	SRM-103420P	×	2
1/4W-110kΩ	×	1	2SC-644(R)		1		_	
			2SC-945(L)K	×	1		•	
●MYLAR CAPA			(special selected)		100	F-E 32 key	X	1
50V-0.001μF	×	3	2SC-1583G		1			
50V-0.0033 _µ F	×	2	2SC-1685S	×	7	● CONNE		
50V-0.01μF	×	1		_		TO BE4P-SHF-1		1
50V-0.022μF	×	3		-	FET	BE7P-SHF-1	×	1
			2SA-30A(O)		1	_BE9P-SHF-1	×	1
●TANTALUM CAPA		100	2SA-30A(RG)	X	2	BS3P-SHF-1	×	1
	×	1	-			BS4P-SHF-1	x	1
16V-10 _µ F	x	1			DES	Female Cor		tors 1
			18-1555			3P MS-1002 4P MS-1003		1
CERAMIC CAPAC	2000.		1S-1885	×	4	4P MS-1003 4P MS-1004	×	1
	x	1		_				1
50V-22pF	×	1	00 4 00000	-	.ED	7P MS-1005 9P MS-1006	×	1
50V-47pF	×	3	GD-4-203RD	×	1	MLR-03TRC-1	×	1
50V-100pF	x	1		0.0	DIC	MLR-03TRC-150		1
50V-560pF	x	1	KORG35		1	MLH-031HC-150	×	,
● ELECTROLYTIC CAPAC	OIT	ane	MC14007	×	1	●PHONE	100	ve
16V-10 _# F		10	#PC4558	×	8	2P SG-7501		
16V-33 _µ F	×	1	μPC4556 μA7815	×	1	2P SG-7615		5
50V-1.0 _H F	×	2	μΑ/615 CA3140	×	- 1	2F 3G-7615	^	9
	×	1		X	2	●PC	BO4	pn
30V-470µF			µA7915	×	1	KLM-130A		1
			мС14069B	×	1	KLM-126B		1
		- 1	MC 14069B	*	- '	KLM-1200	^	
		● SEMI-FIXED RESISTORS						
		SR19DS 10kΩ x 2						
			SR19DS 100kΩ		4			
			2H19D2 100KII	X	4			
					- 1			
					- 1			

6. BLOCK DIAGRAM

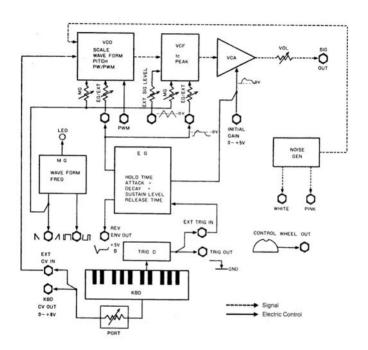

7. ADJUSTMENT PROCEDURE

7-1 Power supply check

- Positive ripple.
 - Should be no more than 2mVp-p.
 - Set oscilloscope vertical gain at 10mV/cm and check that power supply ripple is 2mV or less.
- 2. Negative ripple.
 - Same as positive, should be no more than 2mVp-p.

7-2 Pitch adjustment

- 1. VCO-1.
 - Perform adjustment with synthesizer controls at "normal setting" (Scale=8, Waveform= Π 1, Master Tune, Pitch, and all other knobs at "0"). See figure 1.
 - a. Play C-3 (high C) on the keyboard and adjust the high semi-fixed screw until you obtain the correct tuning as indicated by WT-10A (connected to the SIG OUT jack).
 - Play key C-1 and adjust the low semifixed screw.
 - Repeat steps a and b as many times as necessary until both are tuned to the correct pitch.

- d. Check the tuning of C-1, C-2, and C-3 on the WT-10A meter to make sure pitch deviation is with +2 cents for each.
- e. Change the scale to 32', 16', 8', and 4' and check the tuning of all four C keys to make sure that the pitch deviation of each is within ±10 cents.

7-3 KBD CV adjustment

Use a 4-1/2 digital voltmeter to measure the KBD CV OUT signal.

- a. Measure output voltage first when you play key C-3, then when you play key C-2. The output voltage for C-3 should be exactly half that for C-3. Adjust the KBD CV high ● semi-fixed screw as necessary so that C-2 produces half the voltage of C-3.
- b. Measure C-2 and then C-1 in the same way. Adjust the KBD CV low semi-fixed screw as necessary so that C-2 produces exactly half the voltage of C-3.
- c. Repeat steps a and b as many times as necessary until the output voltage of each of C-1, C-2, and C-3 is exactly half that of the next.

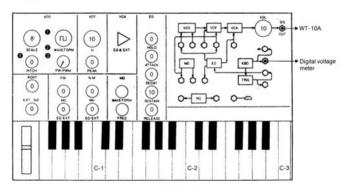


Fig. 1

7-4 VCF Fc adjustment

Connect a frequency counter to the Sig out jack.

1. VC LPF

Refer to the settings shown in figure 2. Set the Fc knob at "5", and the LPF PEAK knob at "10". Then adjust the ullet semi-fixed screw as necessary so that the LPF oscillation frequency is 500Hz.

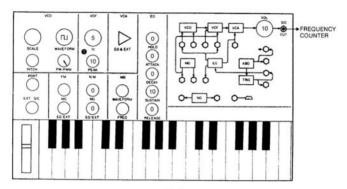


Fig. 2